
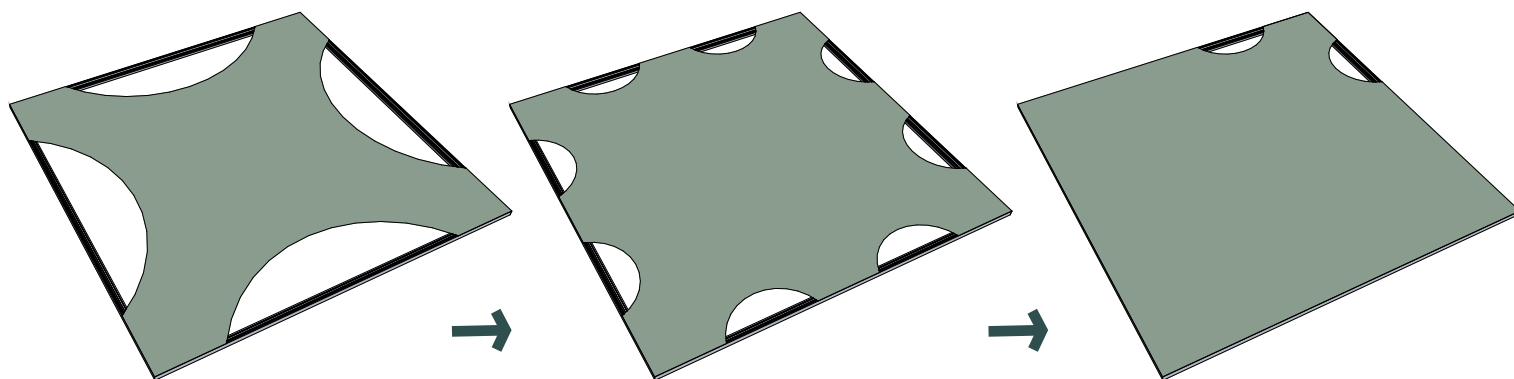


if the frame is too long and requires more than 1 length of extrusion **ADD STRAIGHT JOINER**

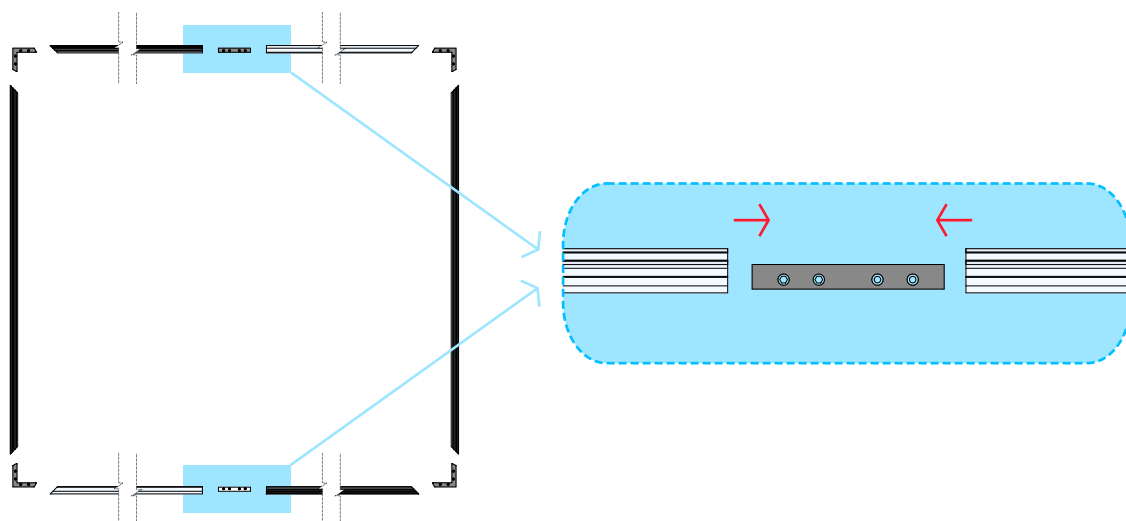

starting in one corner of the frame, tuck silicone edge of fabric into channel. Repeat for the other three corners.

Tuck silicone into the center all four sides.

Work your way accross top of graphic tucking silicone edge into channel. repeat for the sides and bottom.