


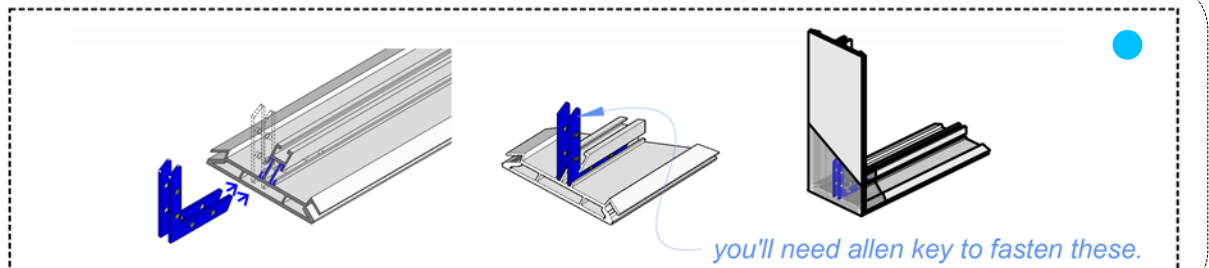
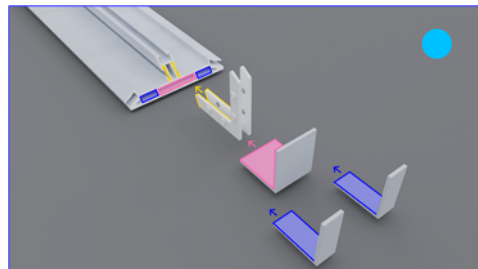
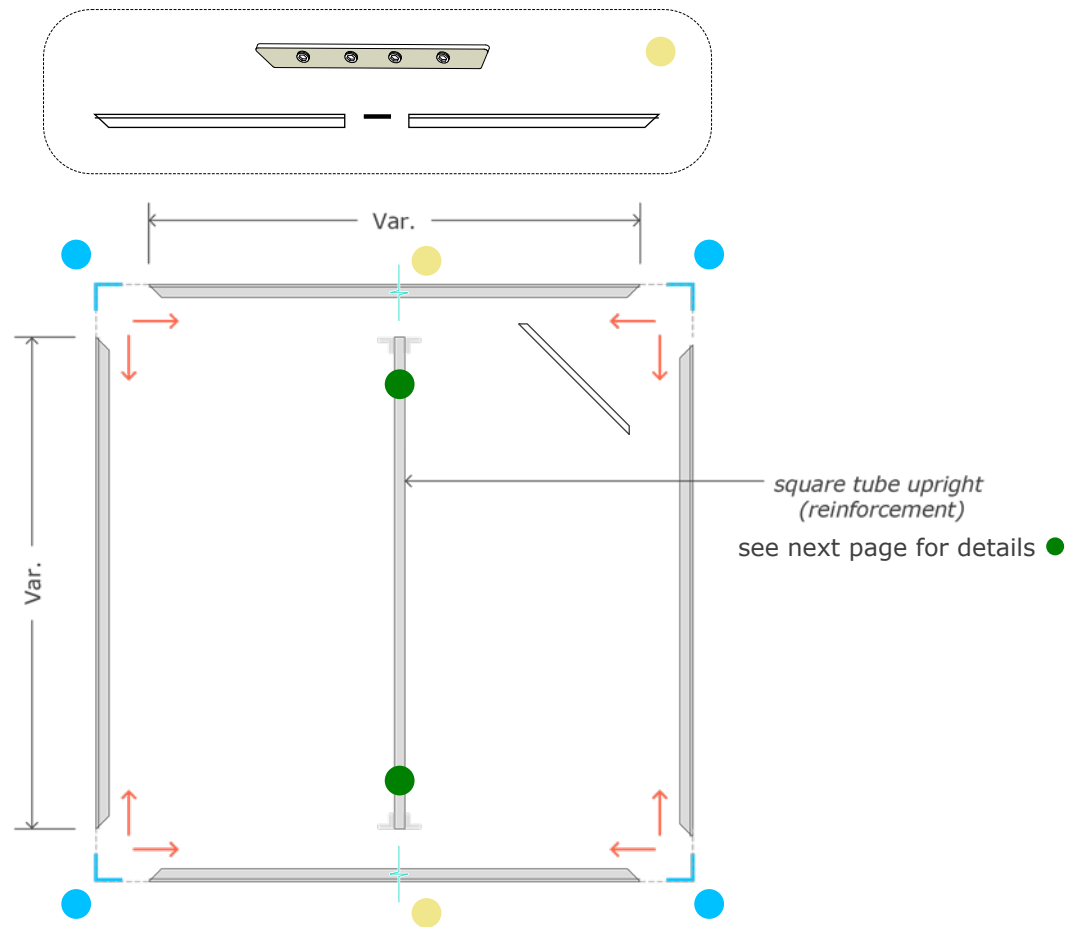


INSTRUCTION SLP130 SEG LIGHTBOX

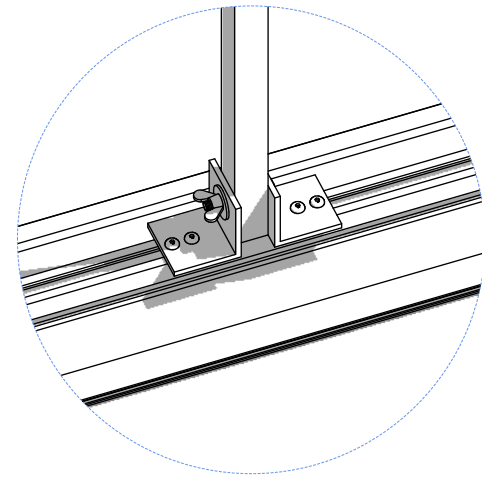


- a. Build the frame flat on the floor (6 extrusions)
- b. Fix the 4 'L' corner angles, 2 sections joiners, 1 Horizontal reinforcement bar and 4 bracings)

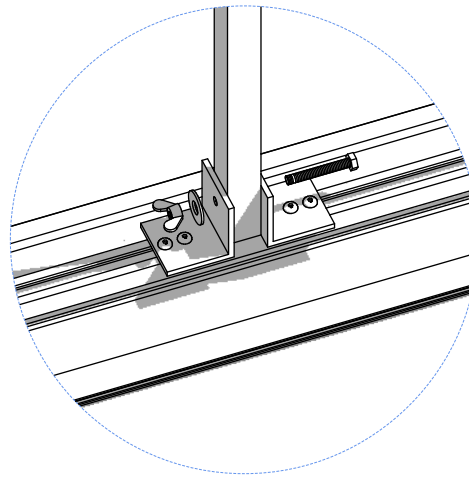

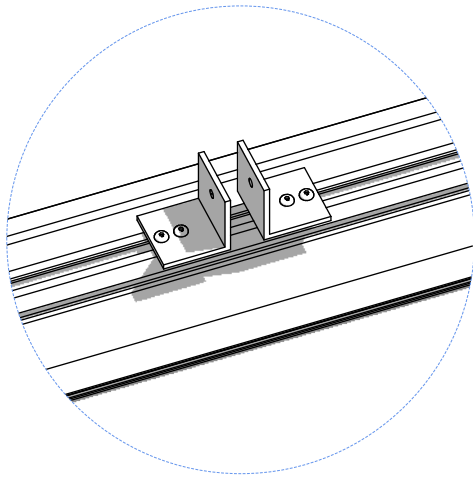


c. Do the electrical connections.

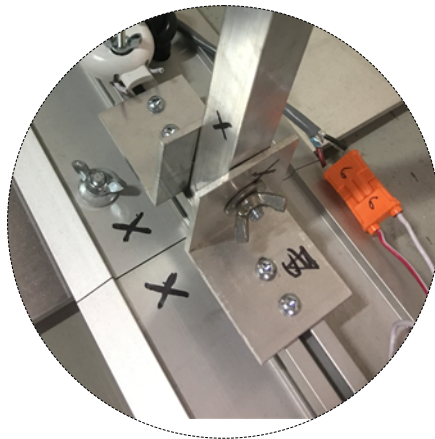

d. Install the 3 Bases Plates at the bottom part



e. Shift upward the entire frame (2 persons minimum is required)

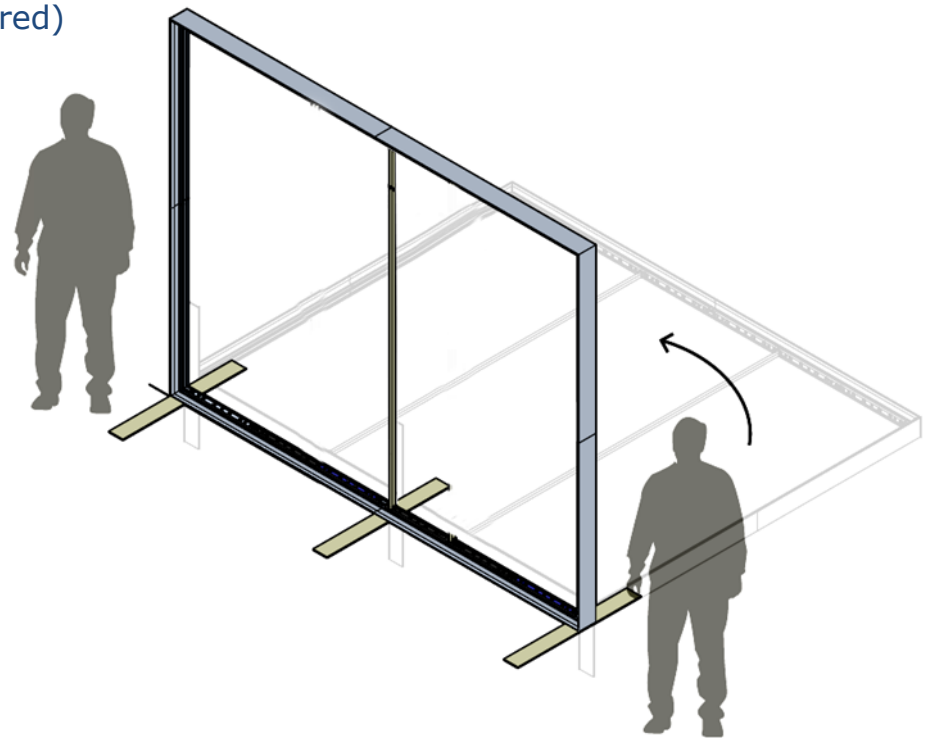

f. Test electricity by plugging in and turning on/off switch



Install fabric

- Turn OFF switch for install
- Wear gloves provided
- Follow Generic Fabric Install Instruction
(Repeat for both sides)




Please wear latex gloves supplied.

starting in one corner of the frame,
tuck silicone edge of fabric into channel.
Repeat for the other three corners.

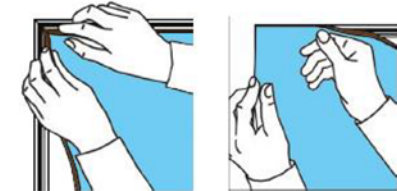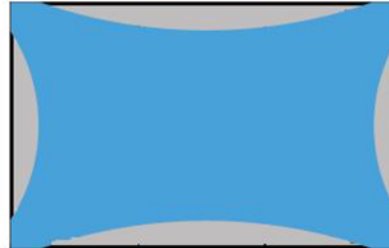

Tuck silicone into the center all four sides.

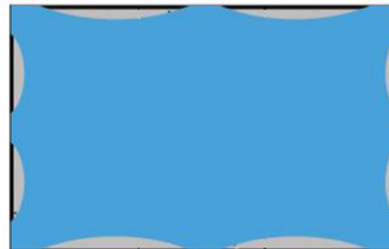

Work your way accross top of graphic
tucking silicone edge into channel. repeat
for the sides and bottom.

